

# INSTALLATION INSTRUCTIONS

REPLACEMENT DEEP CUP HOLDER SUITS MERCEDES X CLASS



AUSTRALIAN MADE

AUSTRALIAN MADE FROM FIBER REINFORCED PLASTIC



## TOOLS NEEDED

 Utility Knife

 Side Cutters


Wear ear and eye protection at all times when using power tools

## PREPARATION

- 1 Remove all items from the packaging and check your cupholder to make sure nothing was damaged in transport.  
Remove the OEM Mercedes cup holder by pulling on it in a firm upward motion. It is just clipped into the center console and will pop out easily.

## TRIM PLASTIC TABS

- 2 The small plastic locating loops inside the centre console may need to be trimmed flush for the cup holder to seat fully.  
An additional larger plastic mount tab will need to be removed in order to gain the full depth for the new cup holders.  
Trimming them takes around a minute using side cutters or a utility knife. See the photos below for a before & after trimming:

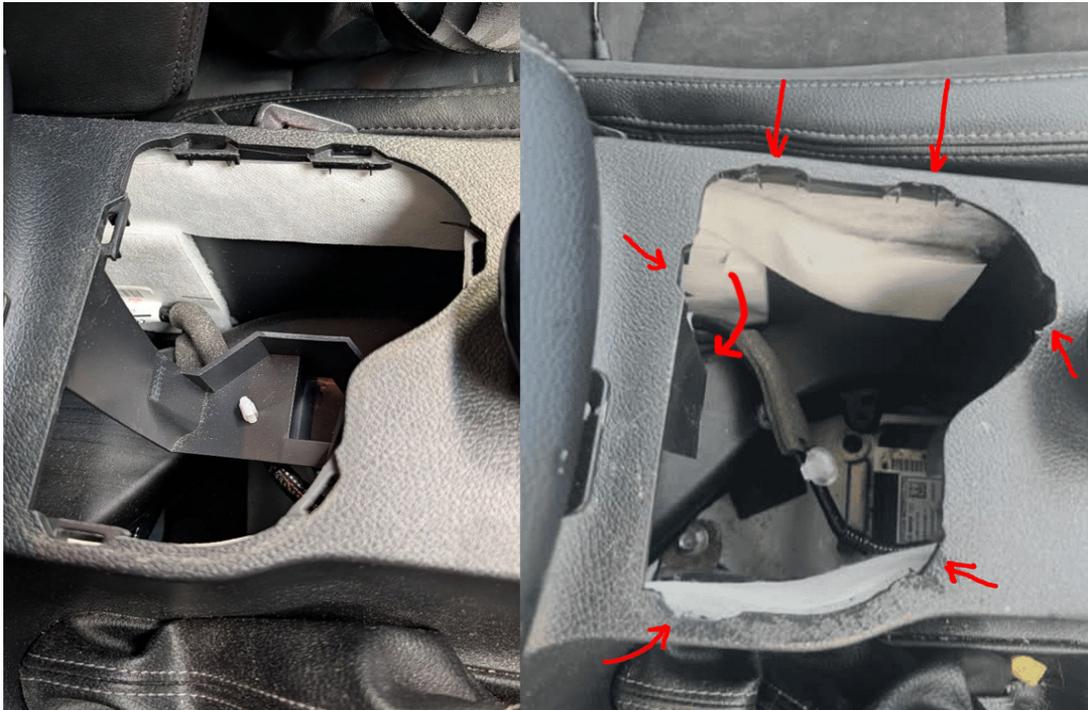

## INSTALL NEW CUP HOLDER

- 3 Install the new cup holder in your center console by simply pushing it down into the newly trimmed center console.  
Congratulations! Crack a cold drink and enjoy the extra room in your now usable cup holders.

### WARRANTY

This Tough Flare is warranted against defects in materials and workmanship for a period of twelve (12) months from the date of initial retail purchase. Do not use this bracket kit for anything other than its intended purpose as a bump stop extension. Failure to follow these instructions or if any modifications to the product are made will void all warranty claims.

For more information visit <https://www.tough toys.com.au/about-us/warranty-policy/>