

INSTALLATION INSTRUCTIONS

RHD DEAD PEDAL SUIT JL WRANGLER /JT GLADIATOR



AUSTRALIAN MADE

AUSTRALIAN MANUFACTURED & DESIGNED

TOOLS NEEDED



4mm 6mm



10mm 13mm

Wear ear and eye protection at all times when using power tools




PREPARATION

- 1 Remove all items from the packaging and check your kit to make sure nothing was damaged in transport.
Clear the area around the RHD drivers entry so you have room to access under the pedals. Slide the driver's seat all the way back.

INSTALL PEDAL

- 2 Using the 65mm long M6 bolt and flange nut, install the plastic pedal pad onto one of the 6 adjustment locations on the bracket.
It is recommended to start in one of the middle hole locations and adjust the pedal to personal preference.

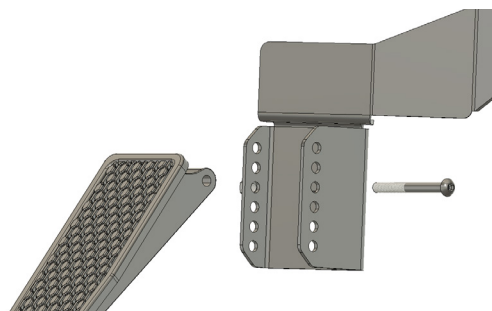


INSTALL COUPLER NUT

- 3 Find the M8 stud coming from the firewall under the brake pedal and install the M8 coupler nut.



INSTALL DEAD PEDAL

- 4 Using the M8 bolt and washer, install the dead pedal and bracket into the vehicle by bolting it to the coupler nut. Be sure to align the bracket pressed against the features of the firewall and tighten the bolt securely.

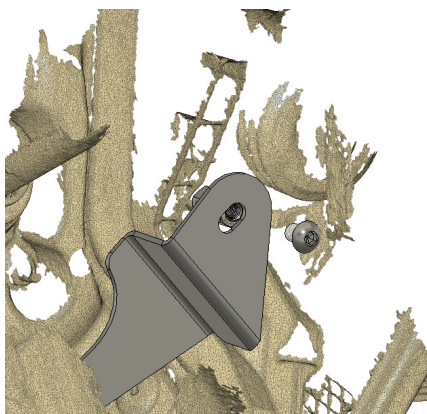

ANGLE ADJUSTMENT

- 5 You may now make final adjustments to the angle by installing the pedal onto a different position on the 6 adjustment locations.



WARRANTY

This Tough Flare is warranted against defects in materials and workmanship for a period of twelve (12) months from the date of initial retail purchase. Do not use this bracket kit for anything other than its intended purpose as a dead pedal foot rest. Failure to follow these instructions or if any modifications to the product are made will void all warranty claims.

For more information visit <https://www.tough toys.com.au/about-us/warranty-policy/>